









Content

Audi	2-3
Ford	4
Saab	5
Volkswagen	6
Volvo	7-10

Remote Control Cover					
Model	Type	Year	Oe Ref	Art No	
A8, A6, A6L A4, A3 A2, TT	Remote control cover. Uncut flip key w/o software. 3 buttons including trunk switch.			83020005	
A8 Quattro Q7	Remote control cover. Uncut flip key w/o software. 3 buttons including trunk switch + 1 alarm switch. Small battery. Length 64mm Width 35mm Height 18mm			83020004	
A8 Quattro Q7	Remote control cover. Uncut flip key w/o software. 3 buttons including trunk switch + 1 alarm switch. Large battery. Length 64mm Width 35mm Height 18mm			83021004	
A4, S4 A3, S3	Remote control cover. Uncut flip key w/o software. 2 buttons + 1 alarm switch. Small battery cage. Length 64mm Width 35mm Height 18mm		4DO 837 231	83020001	
A4, S4 A3, S3	Remote control cover. Uncut flip key w/o software. 2 buttons + 1 alarm switch. Large battery cage. Length 64mm Width 35mm Height 18mm		4DO 837 231	83021001	

Remote Control Cover					
Model	Type	Year	Oe Ref	Art No	
A4, S4 A3, S3	Remote control cover. Uncut flip key w/o software. 2 buttons. Small battery cage. Length 64mm Width 35mm Height 18mm		4DO 837 231	83020002	
A4, S4 A3, S3	Remote control cover. Uncut flip key w/o software. 2 buttons. Large battery cage. Length 64mm Width 35mm Height 18mm		4DO 837 231	83021002	
A4, A3 A2	Remote control cover. Uncut flip key w/o software. 3 buttons including trunk switch. Small battery cage. Length 64mm Width 35mm Height 18mm			83020003	
A4, A3 A2	Remote control cover. Uncut flip key w/o software. 3 buttons including trunk switch. Large battery cage. Length 64mm Width 35mm Height 18mm			83021003	

Any references to part numbers, vehicle models and manufactures are done only for informational purposes. It is not intended to imply affiliation with or approval by the vehicle manufacturer.

Remote Control Cover					
Model	Type	Year	Oe Ref	Art No	
C Max Fiesta Focus Ka	Remote control cover. Flip key w/o software. 3 buttons including trunk switch. Length 70mm Width 36mm Height 16mm			83130001	
Fiesta Focus Mondeo	Remote control cover. Flip key w/o software. 3 buttons including trunk switch. Length 70mm Width 36mm Height 16mm			83130002	

Remote Control Cover					
Model	Type	Year	Oe Ref	Art No	
9-3	Remote control & software, 433.92 MHz	2003-	12801309 (12758289) (12764369) (12783781)	83343781C	
9-3	Remote control cover. Without key or software. Other oe ref: (12801309) (12758289) (12764369) (12767979) (12801310) (12758288) (12764370) (12767978) (12801311) (12758287) (12764371) (12767977)	2003-	12783781 (12783780) (12783779)	83343781	
9-3	Blank key for remote control cover 83343781 4D, 5D CV	2003-07 2004-11	12787976	83343781-1	
9-3	Blank key for remote control cover 83343781 4D, 5D, CV	2008-11	12783781	83343781-2	
9-3	Transmitter, 433.92 MHz	2003-	12783781	83343781-3	
9-3	Remote control cover & software, 315 MHz	2003-	12801310 (12758288) (12764370) (12767978) (12783780)	83343780C	
9-3	Transmitter, 315 MHz	2003-	12783780	83343780-1	

Any references to part numbers, vehicle models and manufactures are done only for informational purposes. It is not intended to imply affiliation with or approval by the vehicle manufacturer.

Remote Control Cover					
Model	Type	Year	Oe Ref	Art No	
Beetle Golf GTI Jetta Passat Rabbit Touareg	Remote control cover. Uncut flip key w/o software. 2 buttons. Length 65mm Width 35mm Height 18mm	1998- 2006- 2007- 1998- 1998- 2006- 2007-	1J0 959 753 CT 1K0 959 753 LD	83420002	
Beetle Golf GTI Jetta Passat Rabbit Touareg	Remote control cover. Uncut flip key w/o software. 2 buttons + 1 alarm switch. Length 65mm Width 35mm Height 18mm	1998- 2006- 2007- 1998- 1998- 2006- 2007-	1J0 959 753 F	83420004	
Beetle Golf GTI Jetta Jetta Passat Scirocco	(GL-GLS-VR6-GTI) (GL - GLX) Remote control cover. Uncut flip key w/o software. 3 buttons including trunk switch + 1 alarm switch. Length 65mm Width 35mm Height 18mm	2002- 2002- 2000- 1998- 2002- 2001-	1J0 959 753 AM 1K0 959 753 P 1J0 959 753 T 1J0 959 753 DC	83420001	
Beetle Golf GTI Jetta Jetta Passat Scirocco	(GL - GLS - VR6 - GTI) (GL - GLX) Remote control cover. Uncut flip key w/o software. 3 buttons including trunk switch. Length 65mm Width 35mm Height 18mm	2002- 2002- 2000- 1998- 2002- 2001-	1J0 959 753 DA 1J0 959 753 AH 1J0 959 753 DJ	83420003	

Remote Control Cover and Insert					
Model	Type	Year	Oe Ref	Art No	
S/V40	Remote control cover. 2 buttons.	2000-04	30857610 (30857616)	83437610	
S/V40	Remote control cover insert.	2000-04	30857610 (30857616)	83430610	
S/V40	Remote control cover kit. Contains 83437610 & 83430610	2000-04	30857610+ 30857616	83437610C	
S/V40	Remote control cover upgrade 2 buttons. Key included.	2000-04	30857610 (30857616)	83438802	
S/V70	Remote control cover. 3 buttons, included trunk switch.	-2000	9166199 (9184784)	83436199	
S/V70	Remote control cover insert. Included trunk switch.	-2000	9166199 (9184784)	83430199	
S/V70	Remote control cover kit. Contains 83430199 & 83436199	-2000	9166199+ 9184784	83436199C	
S/V70	Remote control cover upgrade 3 buttons, included trunk switch. Key included.	-2000	9166199 (9184784)	83438803	

Any references to part numbers, vehicle models and manufactures are done only for informational purposes. It is not intended to imply affiliation with or approval by the vehicle manufacturer.

Remote Control Cover and Insert					
Model	Type	Year	Oe Ref	Art No	
S/V70	Remote control cover. 4 buttons, included trunk and alarm switch.	-2000	9166200	83436200	
S/V70	Remote control cover insert. Included trunk and alarm switch.	-2000	9166200	83430200	
S/V70	Remote control cover kit Contains 83436200 & 83430200	-2000	9166200	83436200C	
S40/V50 C70II C30	Remote control cover W/o batteries, w/o electronics, vehicles w/o keyless locking system. 5 buttons	2008-12 2008- 2008-	31300258 (31300261) (31300260) (31300259) (31264383)	83430258	
S60/80 V70N	Remote control cover 4 buttons, included trunk switch. More oe ref (9459366) (9459371) (9459367) (9452455)	1999-03 2000-04	9452457 (9459365)	83432457	
S60/80 V70N	Remote control cover insert	1999-03 2000-04	9452457	83430457	
S60/80 V70N	Remote control cover kit Contains 83432457 & 83430457	1999-03 2000-04	9452457	83432457C	
S60/80 V70N	Remote control cover upgrade 4 buttons, included trunk switch. Key included. More oe ref (9459366) (9459371) (9459367) (9452455)	1999-03 2000-04	9452457 (9459365)	83438801	
S60 S80 V70 XC70	Remote control cover Ch -147 Ch -161195 FC1 Ch -45075, FC2 Ch -47578 Ch -3972 5 buttons, included trunk and alarm switch	2001-03 1999-03 2000-03 2001-03	9459368 (9452456-8) (8685150)	83439368	

Remote Control Cover and Insert					
Model	Type	Year	Oe Ref	Art No	
S60 S80 V70 XC70	Remote control cover insert Ch -147 Ch -161195 FC1 Ch -45075, FC2 Ch -47578 Ch -3972 4 buttons, included trunk and alarm switch	2001-03 1999-03 2000-03 2001-03		83430368	
S60 S80 V70 XC70	Remote control cover kit Contains 83439368 & 83430368 Ch -147 Ch -161195 FC1 Ch -45075, FC2 Ch -47578 Ch -3972	2001-03 1999-03 2000-03 2001-03	9459368 (9452456-8) (8685150)	83439368C	
S60 S80 V70 XC70 XC90	Remote control cover 5 buttons, included trunk and alarm switch	2004-09 2004-06 2004-07 2004-07 2003-	8688800 (31253452) (8688799) (8688798) (8626557)	83438800	
V40II V40XC S80II S/V60 V70III XC70II XC60	Remote control cover, 5 buttons W/o batteries, w/o electronics	2013- 2013- 2007- 2011-18 2008- 2008- 2009-17	31419133 (31391409) (30659637)	83439637	
V40II V40XC S80II S/V60 V70III XC70II XC60	Transmitter, 433 MHz W/o keyless function, Programming required	2013- 2013- 2007- 2011-18 2008- 2008- 2009-17	31419133 (31391409) (30659637)	83439637-1	
V40II V40XC S80II S/V60 V70III XC70II XC60	Remote control cover, 6 buttons W/o batteries, w/o electronics	2013- 2013- 2007- 2011-18 2008- 2008- 2009-17	31419132 (31419131) (31391409) (30659502)	83430132	

Any references to part numbers, vehicle models and manufactures are done only for informational purposes. It is not intended to imply affiliation with or approval by the vehicle manufacturer.

Replacement guide for 83438800 S60I, S80I, V70II, XC70II & XC90

1) Open the old remote control cover.
Carefully saw the middle upper part
using a hacksaw where shown
in the picture (it is glued together)



2) Cut out the small chip from inside the lid.
Use caution, chip is very fragile.
Put chip into the new remote control cover,
close it and check that it works properly



3) See to that the key feather is properly
mounted for opening of the manual key.
Glue together chip and lid



4) You are now ready to start using
your new Proparts remote control cover!

