

**Repair Kit**  
**Steering Knuckle for Shock Absorber**  
**Fits SAAB 900 Year 1994-98 & 9-3 1998-02**




**Installation guide:**

- \* Remove steering knuckle from car as instructed in the manual
- \* Remove old threading and polish rust
- \* Place new cylinder included in the kit where old threading used to be



- \* Weld cylinder on the steering knuckle
- \* Mount steering knuckle on the car as instructed in the manual

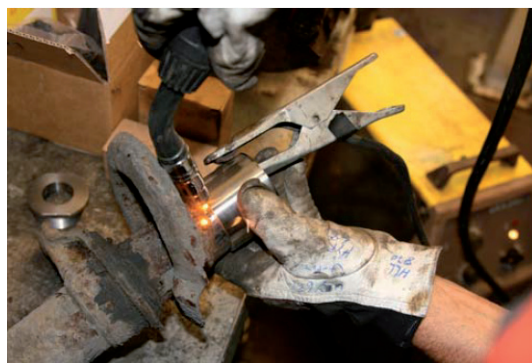

---

Any references to part numbers, vehicle model and manufacturers are done only for informational purposes. It is not intended to imply affiliation with or approval by the vehicle